For spare parts refer to back of page.

This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for correct operation and safety, especially Proof of checks of play equipment maintenance the points listed below: Stainless steel Playground..... 1. Clean with stainless steel spray Date of installation (www.kim-tec.de) using a clean cloth Checks depend on the type of equipment. Any equipment with moving parts must Sound tubes be checked at least twice a year, static equipment at least once a year. Check that ring and tension cables are properly connected and retighten bolts if Intervals for maintenance work and checks necessary. generally depend on **Beaters** - the location - the usage Check for wear and tear, replace if necessary. - the frequency of use - possible vandalism Check that the beaters are properly connected. For more details see also "General instructions for maintenance of If necessary, disentangle suspension cables; playgrounds". if a beater is missing (vandalism) install a replacement beater. **Tubular Chimes** Structural stability Order No. 10.52400 6. In order to check that the equipment is securely fastened to the ground, uncover the foundations once a year. Special notes, e.g. for repairs Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action All work carried out, everything is in order Maintenance carried out by:

...... Date

Spare Parts
Tubular Chimes
Order No. 10.52400



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

/ IFHI \	
Order No. Spare part	
10.99905 beater, complete	
10.99920 tube with suspension cable	