This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for correct operation and safety, especially Proof of checks of play equipment maintenance the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. **Recommendation**: apply paraffin wax to the upper end grain areas once a year, please Intervals for maintenance work and checks generally depend on refer to order No. 0.90100, 1 litre. - the location Structural stability - the usage - the frequency of use 4. Uncover the foundation once a year in order - possible vandalism to check for corrosion. For more details see also "General 5. Check surfacing material; if the layer is too instructions for maintenance of thin, refill with wood chips or the like. playgrounds". Life Path Steps/Ramp Order No. 11.50401 Special notes, e.g. for repairs