Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
Playground	Bucket wheel	
Date of installation	Check that the axel is stable; if necessary tighten locking bolts with a 13 mm spanner	
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.	Axle	
	Check that the axle moves freely in the bearing blocks (4 maintenance-free bearing)	gs).
Intervals for maintenance work and checks generally depend on	Suspension	
<ul><li>location</li><li>kind of use</li><li>frequency of use</li><li>possible vandalism</li></ul>	3. Check that cotter pins are present.	
	Connection	
	Check that the pedestal pipe is stable.	
For more details see also "General instructions for maintenance of playgrounds".		
Small Bucket Wheel Order No. 5.15900 for connection to concrete base		Special notes, e.g. for repairs
	Repair not carried out, t is still possible to play on equipment	
	Repair not carried out, equipment is taken out of action	
	All work carried out, everything is in order	
	Maintenance carried out by:	, ,
	D	ate