Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Plastic parts Playground Date of installation 1. In case of excessive wear or damage, repair or replace the disc Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static Screw fittings equipment at least once a year. Intervals for maintenance work and checks generally depend on 2. Check for tight fit, tighten if necessary - location **Function** - kind of use - frequency of use - possible vandalism 3. Check the turntable for movement, remove dirt if necessary For more details see also "General instructions for maintenance of playgrounds". Structural stability **Damming Disc** 4. 1 x a year check fastening in concrete or Order No. 5.20908 pavement for firm fit Special notes, e.g. for repairs Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action All work carried out, everything is in order Maintenance carried out by: Date