Instructions for wear checks of play equipment		The equipment must be checked for correct operation, especially the points listed below:		Proof of maintenance	
Location		Mechanism			
Date of installation	1.	Check that lid can be slid easily. It must not be possible to take the lid off.			
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.		Stainless steel			
	2.	Clean with stainless steel spray using a clean cloth.			
Intervals for maintenance work and checks generally depend on		Structural stability			
- location - frequency of use - possible vandalism	3.	Check anchoring to the ground every 12 months.			
		Refilling of scent oils			
	4.	Please pay attention to the notes on page 2.			
Scented Organ Order No. 10.61000/10.61030 10.61050	Po	pair not carried out,		Special notes, e.g. for repairs	
· ·		s still possible to play on equipment			
		pair not carried out, uipment is taken out of action			
		work carried out, erything is in order			
	Ма	nintenance carried out by:		•	
		Date			

## Filling the scent oils


#### Note

We recommend refilling only when you notice that the scent oils have disappeared.


Dosing of the scent oils should be carried out extremely carefully so as to avoid any irritation caused by too intense scents/ smells. We recommend an amount of 2 - 5 drops.

## Refilling

- 1. Lift the cover and loosen the M8 nut inside.
- 2. Remove the cover.
- 3. If necessary, replace the cotton wool pad.
- 4. Pour a few drops of the scent oil onto the cotton wool pad through the top outer holes.
- 5. Replace the cover and screw the nut up.

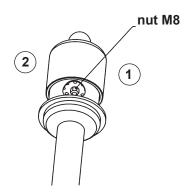

holes for scent oils

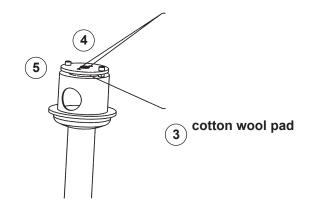

#### scent oils

## Pillar No. 1

(shortest/innermost scent pillar): Rosewood

### Pillar No. 2

Peppermint

### Pillar No. 3

Sage

### Pillar No. 4

Cinnamon

#### Pillar No. 5

Lemon

### Pillar No. 6

Clove

## Pillar No. 7

Aniseed

# Pillar No. 8

Birch sap

### Pillar No. 9

(tallest/outermost scent pillar): Bitter almond

### **Height of pillars**

Pillar No.	Height (cm)
1	90
2	95
3	100
4	105
5	110
6	115
7	120
8	125
9	130

